

SEIKO

取扱説明書
INSTRUCTIONS

S601

この度は弊社製品をお買い上げいただき、誠にありがとうございます。
ご使用前にこの説明書をよくお読みの上、正しくご愛用ください。お預り申上げます。
なお、この説明書はお手元に保管し、必要に応じてご覧ください。




■BUTTONS AND CHANGE OF DISPLAY

■HOW TO SET THE TIME AND CALENDAR



■HOW TO USE THE STOPWATCH

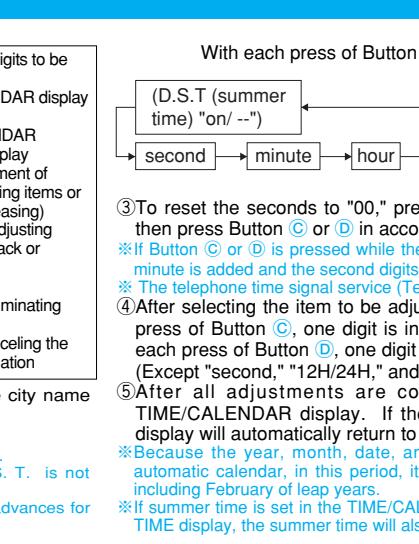

■FEATURES

■HOW TO USE THE STOPWATCH

This watch can store time data measured by the equipped stopwatch up to 100 units of memory. Data within 100 units of memory can be sorted by channel when being stored. The stopwatch has a pace sound and running distance calculator as its sub functions. This watch is a sports watch for runners, which can recall the best lap time and average lap time from the measured time data by using its memory function. The stopwatch function of this watch is equipped with a 3-channel alarm function, timer function and world time function which can display the time of 33 cities throughout the world.

■TIME/CALENDAR

• Year, month, date, day, hour, minute, second, and summer time mark can be displayed. Either of a 12-hour indication or 24-hour indication of time display can be selected.

The month and year automatically adjusts for odd and even months including February of leap years from January 1, 2009 to December 31, 2058 (Automatic calendar).

■STOPWATCH

• The stopwatch can measure up to 9 hours 59 minutes 59 seconds 99 in 1/100 second increments.

• Up to 100 units of memory can be used for storing measured time data.

• The measured data can be sorted by channel when being stored in memory.

■Buttons and operations

• Press button B to show the STOPWATCH display.

■About memory

• The stored data (lap number, lap time, and split time) can be recalled on demand after measurement.

• The best lap time and average lap time can be displayed.

• The running distance, which is calculated based on the pace, etc., set in advance and total measurement time, can be displayed.

■TIMER

• The timer can be set from 1 minute to 60 minutes in one-minute increments.

■ALARMS

• The three-channel daily alarm sounds at a designated time (hour and minute) every 24 hours.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■WORLD TIME

• The time of 33 cities (including GMT) throughout the world can be displayed.

• The summer time (DST) can be set for each city (except GMT).

■AUTO ILLUMINATION FUNCTION

• If set in advance, the display is illuminated for approximately 2 seconds with the touch of any of the buttons (except pressing buttons for adjusting items or digits).

■ILLUMINATING LIGHT

The built-in light illuminates any digital display for approximately 2 seconds by pressing the button for turning on the light.

■REMARKS ON THE BATTERY

• The battery life indicator that enables you to know when the battery needs to be replaced.

• When the battery nears its end, all the digits start flashing.

• In that case, immediately have it replaced with a new one by the retailer from whom the watch was purchased.

■Notes on the battery

■Battery life

• When a new normal battery is installed, this watch

operates for approximately three years. However, if the alarm is used more than once a day, the illuminating light more than 50 times a day, and/or the confirmation sound more than 50 times a day, the battery life may be less than the specified period.

• The battery life should be approximately 3 years. If the alarm sounds more than 20 seconds a day, if the built-in illuminating light is used more than 50 times a day, and/or the confirmation sound is used more than once a day, the battery life may be less than the specified period.

• The battery life may be shorter than the specified period.

• The battery in your watch may run down in less than two years after the date of purchase, as it is a monitor battery which is inserted at the factory to check the function and

performance of the watch.

■Battery change

• For battery replacement, be sure to have the battery replaced with a new one at the retailer from whom the watch was purchased, and specify a genuine battery.

• If the old battery is left in the watch for a long time, a malfunction may be caused due to battery leakage, etc. Have it replaced with a new one as soon as possible.

• Battery replacement is charged even if it runs down within the guaranteed period.

• Once the case back is opened for battery replacement, the power source must be the original battery. The original battery's residual quality designed for the watch may deteriorate when it is closed. When you have the water resistance test performed to the water resistance of your watch, if it is rated at 10-bar or higher water resistant quality, be sure to have such test performed on the watch every time the battery is replaced. Please note that it takes several days to check the water resistance quality of your watch. When requesting the checking, therefore, please check the period required for it.

• The battery in your watch may run down in less than two years after the date of purchase, as it is a monitor battery which is inserted at the factory to check the function and

performance of the watch.

■Battery life indicator

• The watch is equipped with a battery life indicator that enables you to know when the battery needs to be replaced.

• When the battery nears its end, all the digits start flashing.

• In that case, immediately have it replaced with a new one by the retailer from whom the watch was purchased.

■Buttons and operations

■TIME/CALENDAR

• The time can be set from 1 minute to 60 minutes in one minute increments

■Buttons and operations

• Press button B to show the TIMER display.

■About memory

• The stored data (lap number, lap time, and split time) can be recalled on demand after measurement.

• The best lap time and average lap time can be displayed.

• The running distance, which is calculated based on the pace, etc., set in advance and total measurement time, can be displayed.

■Buttons and operations

• The three-channel daily alarm sounds at a designated time (hour and minute) every 24 hours.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Press button B to show the ALARM display.

■About memory

• The time can be set from 1 minute to 60 minutes in one minute increments

■Buttons and operations

• Press button B to show the WORLD TIME display.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Press button B to show the ALARM display.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.

• Each alarm channel can be engaged ("on") or disengaged ("off") independently.

■Buttons and operations

• Change between the alarm 1, 2, and 3.