 


WIRED デジタル 取扱説明書 INSTRUCTION W771
セイコーウォッチ株式会社
本 社 東京都港区芝浦1丁目2番1号 〒105-8467
セコー製品について、修理その他のご相談は、「お問い合わせ」でうたてさせていただきます。

 
FEATURES
This watch is equipped with the following functions in addition to the time (hour and minute) display.

- World time ..... You can select cities from 77 cities and regions around the world for the Main Time and Sub Time (3 Sub Time cities), and the current time of each city can be displayed.
Calendar ..... The month, date and day of the week of cities selected for the Main Time and Sub Time can be displayed.
Automatic calendar ..... The calendar automatically adjusts for odd and even months (from 2005 to 2050).


Specification
1. Frequency of crystal oscillator ..... 32,768 Hz (HZ=Hertz; Cycles per second)
2. Loss/gain (monthly rate) ..... Less than 30 seconds (worn on the wrist at a normal temperature range between 5°C and 35°C)

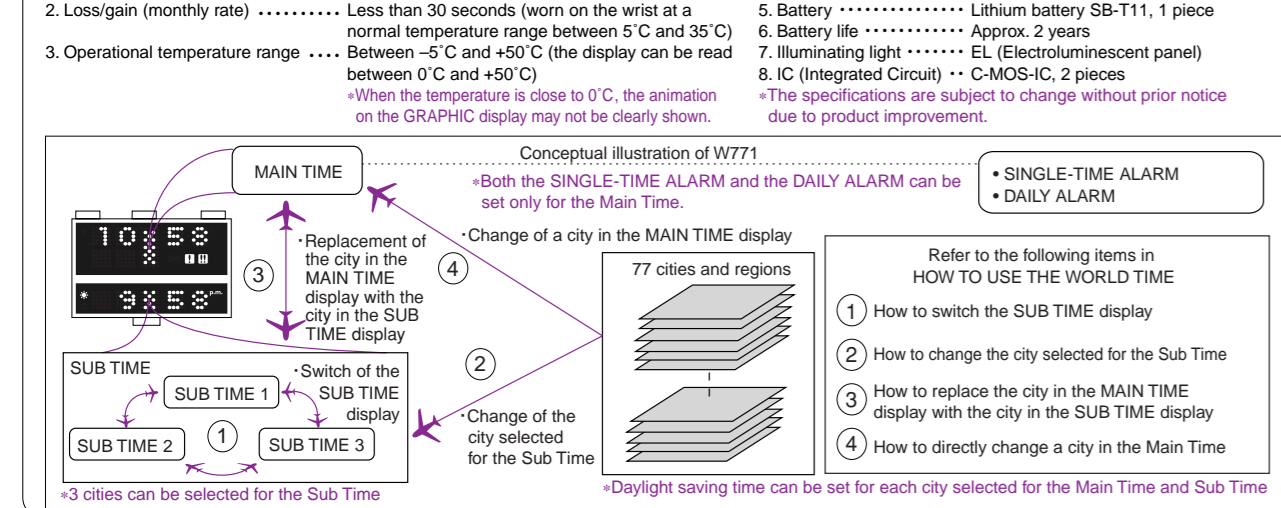


DISPLAY AND BUTTON OPERATION
●TIME display
"Hour" and "Minute" of the selected cities are displayed for the MAIN TIME and SUB TIME displays respectively.

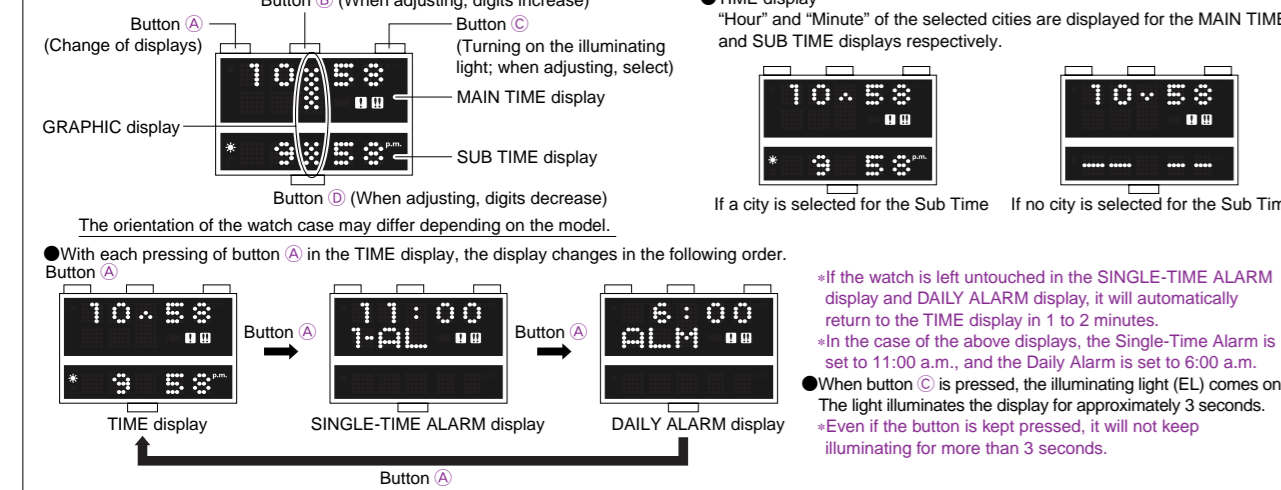

 
HOW TO SET THE TIME AND CALENDAR
This watch has the World Time function. In setting the time and calendar, it is necessary to select a city that corresponds to the setting time for the Main Time.

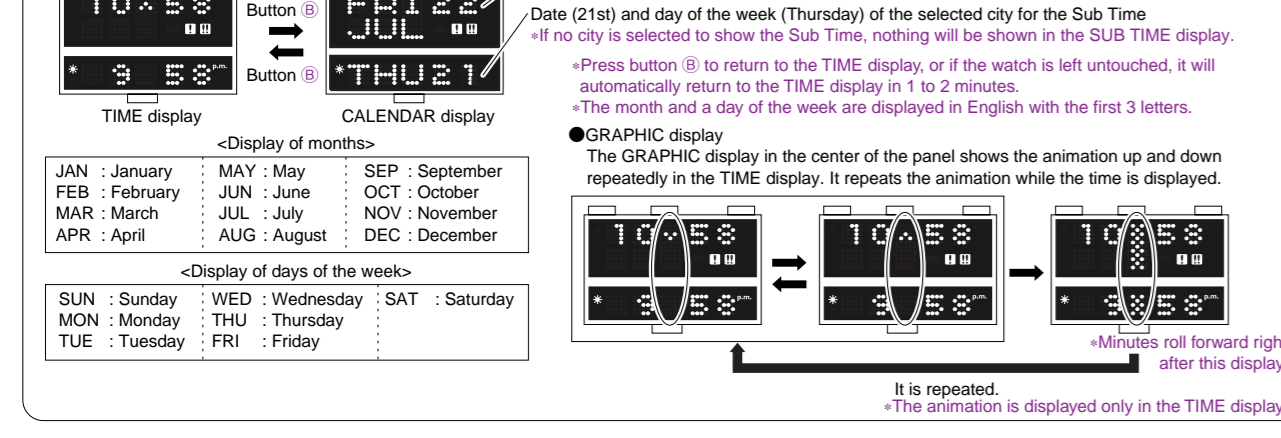

 
HOW TO SET THE TIME AND CALENDAR (continued)
This watch has the World Time function. In setting the time and calendar, it is necessary to select a city that corresponds to the setting time for the Main Time.

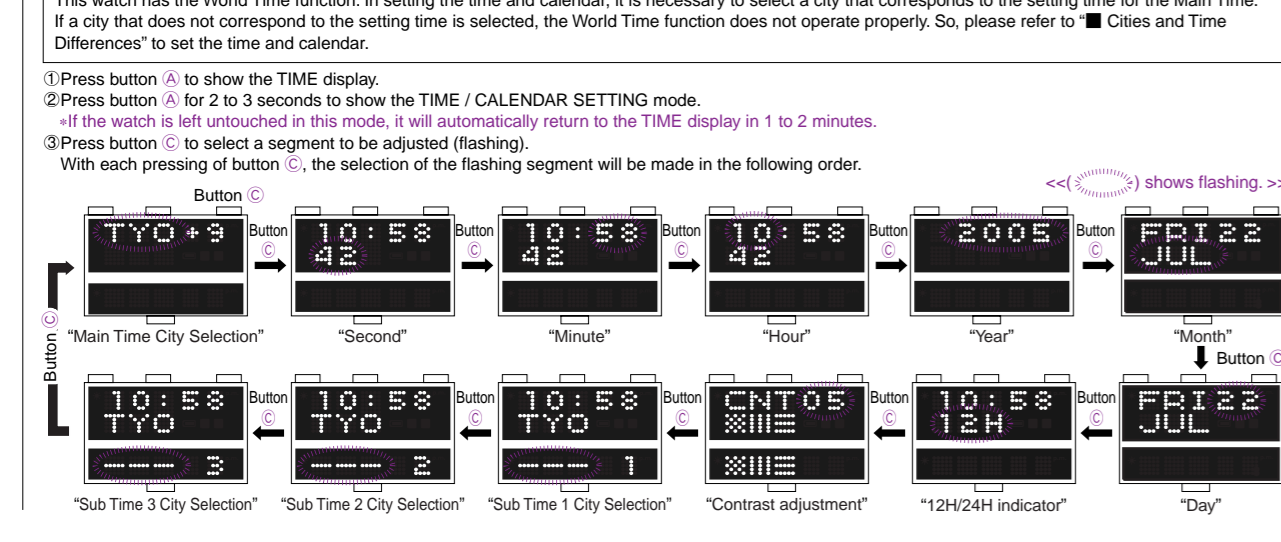





 
The names of cities flash for setting in the "Main Time City Selection."
④The names of cities flash for setting in the "Main Time City Selection."

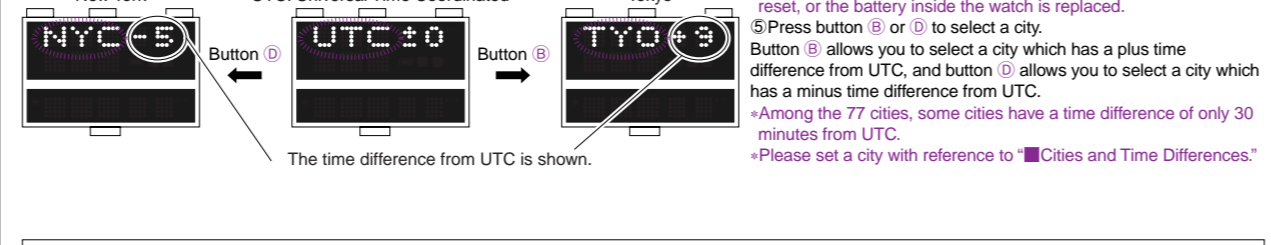

 
Setting daylight saving time for the Main Time
NYC -5 illuminated NYC -5



     
Press button B or C to set the time and calendar for the city selected in the "Main Time City Selection."
With each pressing of button B, one digit is increased. Digits move continuously if the button is kept pressed.

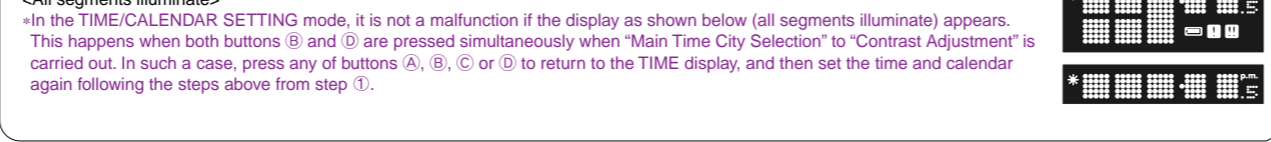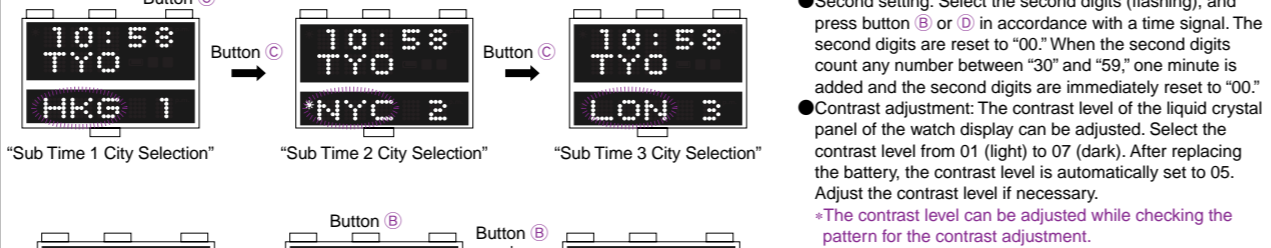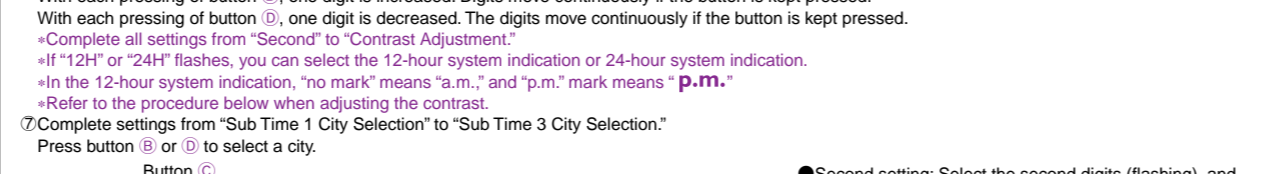

 
HOW TO USE THE WORLD TIME
You can select cities from 77 cities and regions around the world for the Main Time and Sub Time (3 Sub Time cities).

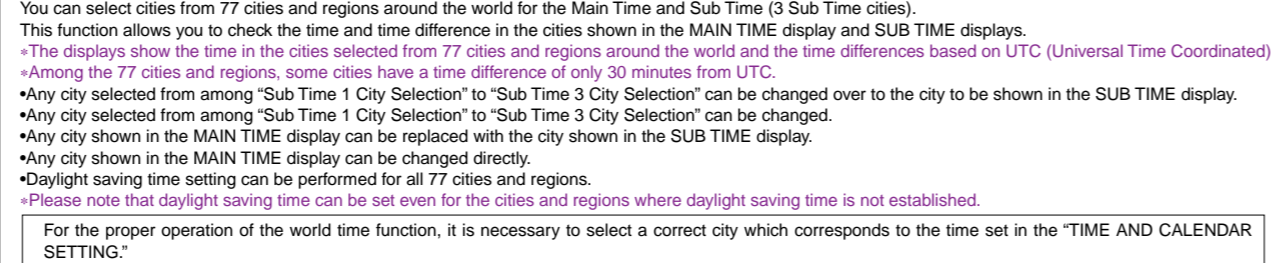

 
HOW TO USE THE WORLD TIME (continued)
You can check the city and time difference to be displayed. You can switch any city selected from among "Sub Time 1 City Selection" to "Sub Time 3 City Selection" to the city to be displayed in the SUB TIME display.

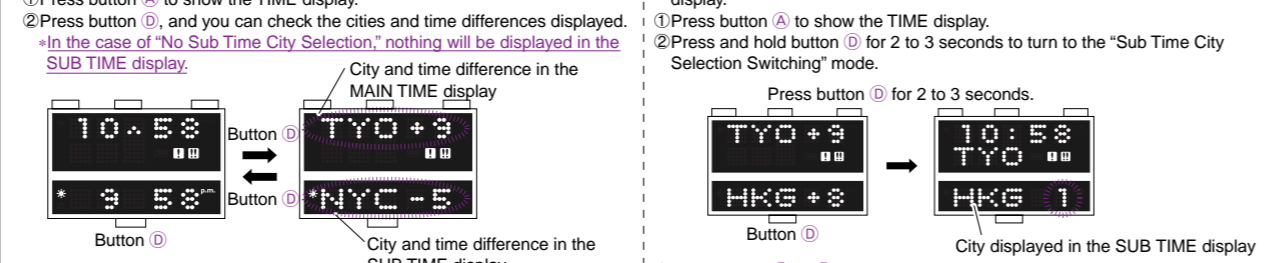

 
HOW TO USE THE WORLD TIME (continued)
You can check the city and time difference to be displayed. You can switch any city selected from among "Sub Time 1 City Selection" to "Sub Time 3 City Selection" to the city to be displayed in the SUB TIME display.

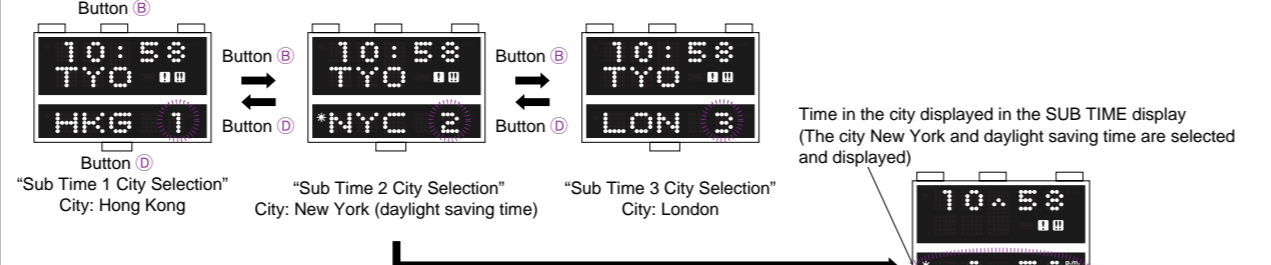

 HOW TO USE THE WORLD TIME (continued)
You can check the city and time difference to be displayed. You can switch any city selected from among "Sub Time 1 City Selection" to "Sub Time 3 City Selection" to the city to be displayed in the SUB TIME display.

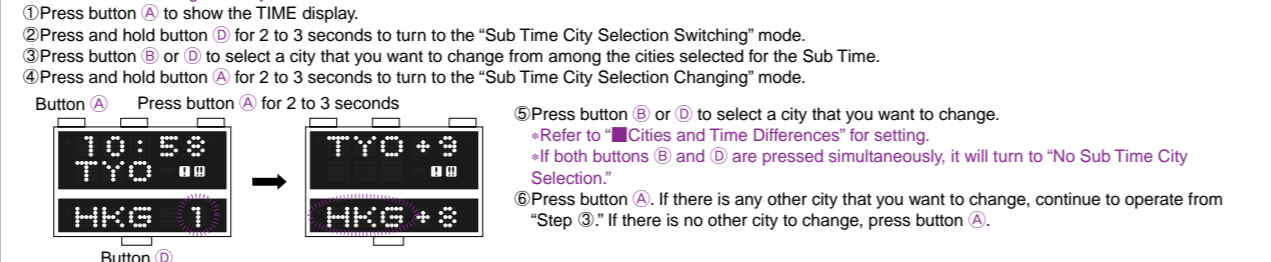
























 
HOW TO USE THE WORLD TIME (continued)
You can check the city and time difference to be displayed. You can switch any city selected from among "Sub Time 1 City Selection" to "Sub Time 3 City Selection" to the city to be displayed in the SUB TIME display.

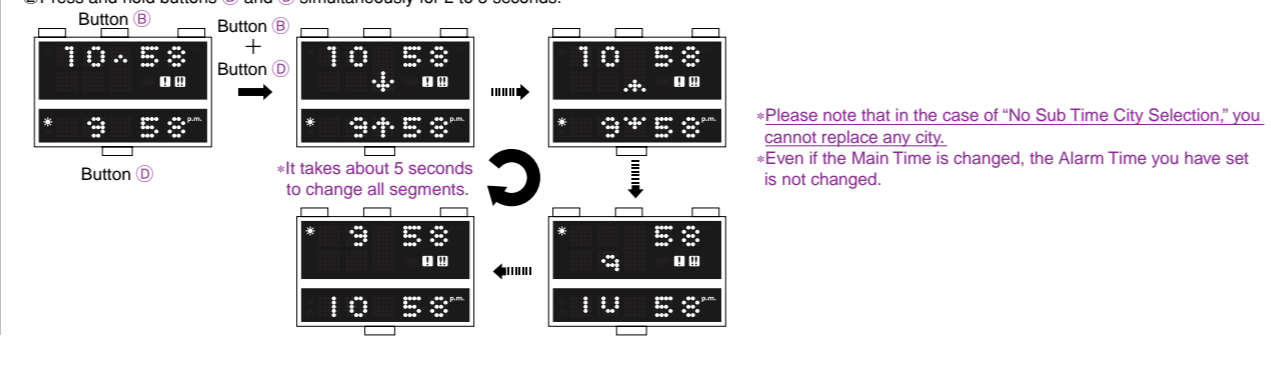


Cities and Time Differences
City mark City name Country or region Time difference (hours) Daylight saving time (DST)
UTC Universal Coordinated Time 0 -

Table listing cities and time differences. Columns include City mark, City name, Country or region, Time difference (hours), and Daylight saving time (DST). Cities listed include NYC, TYO, HKS, LON, etc.

                        HOW TO USE THE SINGLE-TIME ALARM
The alarm time can be set by increasing or decreasing the digits from the current time. The Single-Time Alarm function is convenient for setting the alarm time close to the current time.



 Battery change
① For battery replacement, be sure to have the battery replaced with a new one at the retailer from whom the watch was purchased, and request the battery for exclusive use with the SEIKO watches.

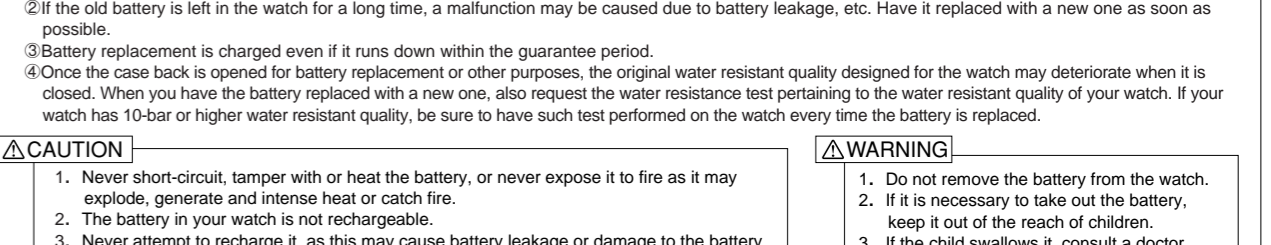

NOTE ON THE ELECTROLUMINESCENT PANEL (FOR ILLUMINATING LIGHT)
The electroluminescent panel for illumination of the display loses its luminance as the battery voltage gets lowered. Also, its luminance level decreases gradually with use.



CARE OF YOUR WATCH
●CARE OF YOUR WATCH
After removing the watch from your wrist, wipe perspiration or moisture with a soft cloth. This will prevent the watch from being soiled, adding to the life of the gasket.



CARE OF YOUR WATCH (continued)
After removing the watch from your wrist, wipe perspiration or moisture with a soft cloth. This will prevent the watch from being soiled, adding to the life of the gasket.

