



How to use the quick-change system (Button-type easy band attachment/detachment system)

Some models are equipped with a mechanism that allows the band to be easily attached and removed by pressing a button, as shown in the diagram.

If the back of your watch resembles the diagram, please refer to the operating instructions below.

You may replace the band if it is a genuine band compatible with the quick-change system.


- * The diagram is provided as an example and may differ from the specifications of your actual watch.
- * When removing or attaching the band, pulling with excessive force may cause damage. Please take care.
- * Repeated attachment and removal of the band may result in minor wear.

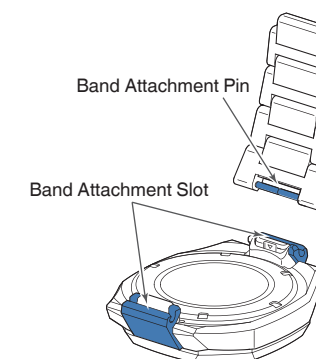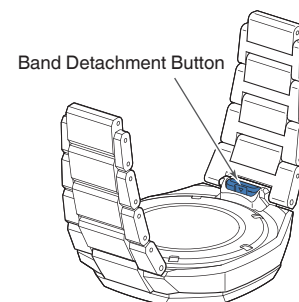

● Removing the Band


- 1 While pressing the button, pull the band in the direction of the arrow shown in the diagram. Perform the same operation on the other side to remove the band from the watch body.

- * Pulling with excessive force may cause damage. If removal is difficult, press the button firmly all the way in.


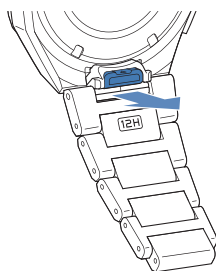


● Attaching the Band

- 1 Check that the 12 o'clock position mark on the back of the band is aligned with the 12 o'clock side of the watch body, and align the band's attachment slot with the attachment pin as shown in the diagram.

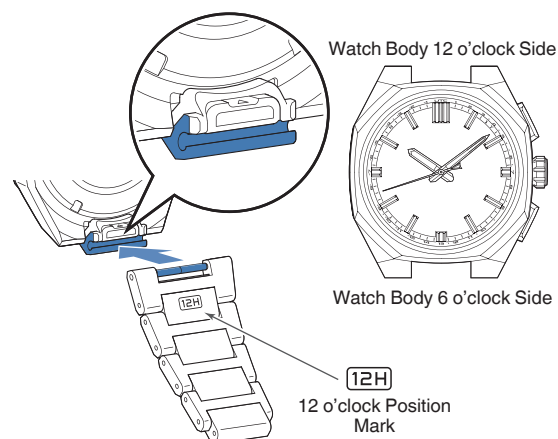

- 2 Push the band in until you hear a "click" sound, and confirm that the band is securely attached to the watch body. Perform the same operation on the other side to attach the band.

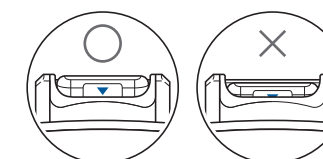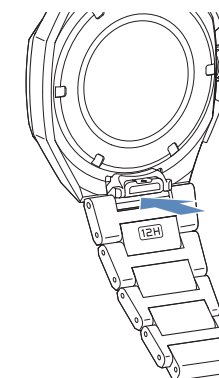

If the ▼ mark on the side of the button is fully visible, the attachment is correct.

- * If attachment is incomplete, the band may detach and the watch may fall.